

KENT HOT POT

Multi-functional Instant Cooker

KENT
Smart Chef
Appliances

HOUSE of PURITY

Instruction Manual

15

PRESET
COOKING FUNCTIONS

1. Pulao
2. Rajma
3. Rice
4. Fried Food
5. Boiled Milk & Porridge
6. Soup
7. Slow Cook
8. Pizza
9. Cake
10. Bread
11. Dal
12. Pasta
13. Yogurt
14. Cereals
15. Steamed Food

5L
Capacity



Welcome to KENT

Dear Customer,

Congratulations on your purchase and welcome to **KENT!**

At the outset, allow us to thank you for your trust in **KENT Smart Chef Appliances**. At KENT, we take pride in our reputation for quality products and industry proven performance. We are certain that you will be more than satisfied with KENT HOT POT Multi-functional Instant Cooker's performance and that it will serve you and your family's need without any compromise.

This guide will help you in getting the best out of your appliance. Please go through the booklet to familiarize yourself with the operation and maintenance.

With the robust build and high quality, you can look forward to years of trouble-free service.

To ensure that the warranty of your appliance is effective, it is important that you fill up the enclosed warranty card and mail it to us within 15 days of purchase.

In case you require any further information, please contact your nearest KENT dealer or branch.

Bon Appétit!

KENT RO Systems Ltd.

TABLE OF CONTENTS

1. Introduction	1
2. Features of KENT HOT POT Multi-functional Instant Cooker	1
3. Know Your Product	1
4. Items in the Box	2
5. Using KENT HOT POT Multi-functional instant Cooker	2
6. Control Panel Explained	2
7. Preset Menus Explained	3
8. Using Different Functions	4
9. How to Operate	4
10. Precautions	4
11. Tips	4
12. Cleaning and Maintenance	5
13. Important Safety Instructions	5
14. Troubleshooting	6
15. Technical Specifications	7

INTRODUCTION

We at KENT have always believed that a clean and healthy life is a right of every individual. This ethos is what made us embark on the journey to develop innovative solutions for purifying the water we drink, the vegetables and fruits that we eat, the homes we live in and the air we breathe.

With the use of innovative technology and supported by a competent service network, we have been able to create a brand which has become synonymous with well-being and health.

Continuing the tradition, we now present the KENT HOT POT Multi-functional Instant cooker for you to try out all your favourite recipes at your convenience.

This multi-functional instant cooker allows you to boil, simmer, bake, fry, deep fry, grill, roast and stew food. It is useful for preparing soup, broth, oatmeal with milk, rice and grains. It also allows food lovers to cook pasta, dumplings, sausages and many such food items.

FEATURES OF KENT HOT POT MULTI-FUNCTIONAL INSTANT COOKER

1. It comes with 15 Preset cooking options that lets you cook at ease.
2. It comes with a Keep Warm feature that will let you keep the food warm for as long as 12 hours.
3. The 24 hour Delay-Start function will let you cook at your convenience.
4. The Multi-functional Instant Cooker is a durable cookware which comes with stainless steel housing body.
5. The Multi-functional Instant Cooker comes with non-stick coated inner pot that lets you cook healthier food, using less oil.
6. It is easy to plug in and thus much safer than traditional gas cookers.

KNOW YOUR PRODUCT



ITEMS IN THE BOX






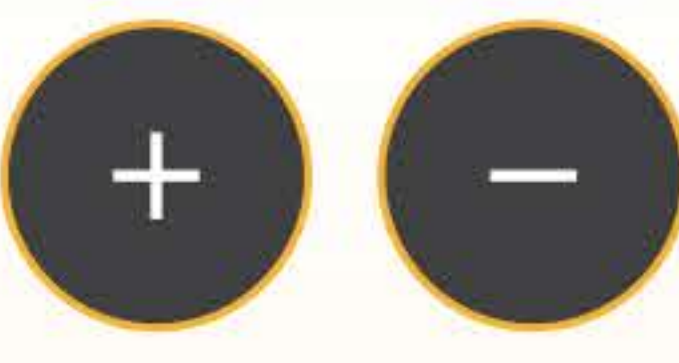
1. KENT HOT POT Multi-functional Instant Cooker : 1 No.
2. Power Cord : 1 No.
3. Inner Pot : 1 No.
4. Rice Spoon : 1 No.
5. Soup Spoon : 1 No.
6. Measuring cup : 1 No.
7. Steam Tray : 1 No.

USING KENT HOT POT MULTI-FUNCTIONAL INSTANT COOKER

1. Remove any stickers that might prevent from operating the unit.
2. Check the unit for damages. Do not use in case of any damages.
3. Before switching on the appliance, make sure that your home mains voltage corresponds to the unit's operating voltage.
4. Clean the parts of the KENT HOT POT Multi-functional Instant Cooker before using the appliance for the first time (see 'Cleaning & Maintenance' section).
5. Make sure all parts are completely dry before you start using the appliance.

CONTROL PANEL EXPLAINED



KEY	FUNCTION	DESCRIPTION
	This key is to Start/Stop or Pause the appliance.	Press the 'Start' key once to start the appliance. To pause, press the key for half a second. To stop or cancel, press key for 3 seconds.
	This key allows to select Keep warm function.	Press the 'Keep Warm' key to keep your food warm for longer time upto 12 hours.
	This button is used to select function and set time. After pressing "Power On", we press "+/-" to select the desired functions and then we set the cooking time by pressing this "Switch" button and then press "+/-", to adjust the cooking time without changing the functions.	To set the desired mode, press 'Menu' key continuously. The corresponding number against the program would be displayed on the LCD screen.
	After pressing "Power On", the cooker enters multifunction mode, press "Switch" to see the display part blink, it is for temperature, you can use "+/-" to set the temperature you need. Then press "Switch" again, you can see the time blink, you can use "+/-" to set time, after setting temperature & time, press "Start" button to enter cooking mode.	Press 'Multifunction' key to select options from the preset menus.
	After pressing "Power On", please select "+/-" to choose the function you need, then press "Preset" button, and use "+/-" to set the time you need, press "Start" to enter the cooking mode.	Press 'Preset' key and select the desired preset function. The chosen setting would be displayed on the LCD screen.
	After pressing "Power On", you can use these 2 buttons to select functions, pressing the "+" button will change functions from left to right, pressing the "-" button, the function changes from right. After you select the function you need, then press the "Start" button, to enter cooking mode. For some functions, you might want to adjust the cooking time. Select the function you want, then press "Switch", you can see the middle of the time display blink, then you use "+" "-" to adjust the cooking time, after setting the time, press "Start" button to enter cooking mode.	To set the time or increase/decrease the time cycle press '+/-' key.

PRESET MENUS EXPLAINED

FUNCTION	USAGE
Cereals	Perfect for making cereals quickly
Steamed Food	Ideal for steaming vegetables and food
Fried Food	For crisp fried food
Pulao	Best option for making the perfect pulao
Milk & Porridge	Ideal setting for boiling milk and making porridge
Soup	For making the healthiest soups conveniently
Rajma	Perfect setting to cook creamy rajma
Cake	Ideal setting for baking cake
Bread	For baking the fluffiest bread
Dal	The best setting to cook dal
Slow Cook	Ideal for slow cooked recipes
Pizza	Perfect option to prepare pizza at home
Pasta	For making the yummiest pasta
Yogurt	Best for making perfect yogurt
Rice	For making fluffy rice

USING DIFFERENT FUNCTIONS

Automatic functions include, Cereals, Steam, Fry, Pulao, Boiling Milk & Porridge, Soup, Rajma, Cake, Bread, Dal, Rice, Slow Cook, Pizza, Pasta and Yogurt. Selecting any one of them to start the multi-function instant cooker on a preset mode of temperature, appropriate for the food item to be cooked.

The functions are controlled by a smart technology and uses dynamic control. According to the food, it adjusts the heat needed and there is no manual intervention required.

HOW TO OPERATE

1. Press "Menu" button and choose the preset functions you need, then press the Power ON button, the cooker will start. After the food is cooked, the cooker will enter "Keep Warm" automatically.
2. While selecting "Delay Cooking" function, choose the option from the preset menu and then adjust the time using '+/-' button. Then press the start button.
3. Press "Multifuction" button to set the temperature and time as you need. Then press the start button.
4. All functions can be Delayed for 24 hours, except Fry, Pizza and Bread
5. All functions can be used along with 12 hours Keep Warm function, except Slow Cook, Yogurt and Pizza

PRECAUTIONS

1. Do not disassemble, repair or alter the machine on your own. It may cause appliance failure or breakdown.
2. The input voltage must not exceed the rating; it might damage the appliance.
3. Unplug before cleaning/moving the appliance.
4. Do not use the appliance with damaged power cord or plug.
5. If power cord is damaged, replace it with a genuine KENT spare.
6. Do not install the machine near any heat source, e.g., heater.
7. If the appliance is not in use for a longer time, unplug it.
8. Do not sit on, stand on or shake the appliance.
9. Do not use the appliance when it is in a inclined position.

TIPS

1. Cooking time changes according to the voltage, rice capacity, water capacity, water temperature, rice quantity.
2. To avoid rice to be caked, mix it slightly using a stirrer and after that select the keep warm function in 30 minutes.
3. The maximum rice is 10 cups, please don't exceed the maximum quantity. The proportion of rice and water could be adjusted according to personal preference.

CLEANING AND MAINTENANCE

1. Switch off and unplug the appliance before cleaning it.
2. Remove the lid and clean the jar with a solution of lukewarm water & soap. Use a cleaning brush; never use scouring pads to clean it.
3. Wipe the main unit with a moist cloth and non-abrasive liquid cleaner.
4. Do not immerse the appliance in water or any other liquid.
5. Never put any part of the appliance in the dishwasher.
6. After cleaning it thoroughly, dry it using a soft cloth.
7. Ensure that the appliance is completely dry before storing it.

Note: Never immerse the main unit in water, nor rinse it under the tap. Wipe it with a dry cloth.

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precaution should always be followed, including the following:

1. Unplug, when not in use and before servicing.
2. To reduce the risk of electric shock, do not use near or on wet surfaces.
3. Use the appliance only as described in the manual.
4. Do not use the appliance if cord or plug is damaged or worn out. Replace the damaged cord or plug immediately.
5. Do not try to service the appliance on your own. Send it to an authorized service center only.
6. Keep cord away from heated surfaces.
7. Do not unplug the appliance by pulling the cord. Always unplug by pulling the plug and not the cord.
8. To avoid electric shocks, do not use the appliance with wet hands.
9. Turn all controls off before unplugging.
10. This appliance is suitable for Indoor use only.
11. Keep away from children.
12. The appliance is not designed to be used by people who, are physically or mentally disabled or mentally handicapped or lack relevant experience and knowledge, unless a person responsible for their safety uses the product for supervision or guidance.
13. Keep away from children.

TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	POSSIBLE SOLUTION
Indicator doesn't light up	<ol style="list-style-type: none"> 1. Power control plate isn't working 2. Power cut 	<ol style="list-style-type: none"> 1. Check if the appliance is unplugged 2. Wait for power to resume
Heating plate doesn't get heated	<ol style="list-style-type: none"> 1. Power control plate is damaged 2. Fuse is damaged 3. Heating plate is damaged 	Go to the nearest KENT Authorized Service Centre for assistance.
Indicator lights up, heating plate doesn't get heated	<ol style="list-style-type: none"> 1. Heating plate damaged 2. Power control plate damaged 	Go to the nearest KENT Authorized Service Centre for assistance.
Rice is under-cooked	1. Capacity of rice is higher or lesser than the prescribed quantity	Adjust the quantity of rice and water. Make sure it isn't exceeding the capacity of the cooker or is much lesser than that.
	2. The proportion of water and rice is not right	Adjust the proportion of water and rice
	3. Inner pot is tilted	Check the positioning of the inner pot and make sure it touches the sensor
	4. There's something between the inner pot and the heating plate	Clean up the cooker
	5. The inner pot has become distorted	Go to the nearest KENT Authorized Service Centre for assistance or buy a new inner pot
	6. Main power control plate is damaged	Go to the nearest KENT Authorized Service Centre for assistance
	7. Main temperature control machine is not working properly	Go to the nearest KENT Authorized Service Centre for assistance
Rice is over-cooked	<ol style="list-style-type: none"> 1. Inner pot has become distorted 2. Main power control plate is damaged 3. Main temperature control machine isn't working properly 4. Inner pot is tilted 	Go to the nearest KENT Authorized Service Centre for assistance or buy a new inner pot
Porridge overflows	<ol style="list-style-type: none"> 1. Quantity has exceeded capacity 2. Haven't installed the overflow-proof lid 	<ol style="list-style-type: none"> Adjust the quantity Install the overflow-proof lid
LCD shows :E1, E2, E3, E4	Power control plate has some problem	Go to the nearest KENT Authorized Service Centre for assistance

TECHNICAL SPECIFICATIONS

Product	KENT HOT POT Multi-Functional Instant Cooker
Product Code	16038
Net Weight	3.1 kg
Capacity	5L
Input Power Supply	Single Phase 220 V AC, 50 Hz.
Power Consumption	700 W



HOUSE of PURITY



Innovations for
Better Living

Marketed by:
KENT RO SYSTEMS LTD.
A-6, Sector-87, Noida-201306, U.P., India.

For customer complaints, contact our Customer Care Officer at:
E-6, 7 & 8, Sector-59, Noida, U.P.-201 309, India.
Call: 92-789-12345
E-mail: service@kent.co.in or visit us at www.kent.co.in