


KENT DIGITAL AIR FRYER 8L

For Baking, Grilling & Roasting



HOUSE of PURITY

Instruction Manual

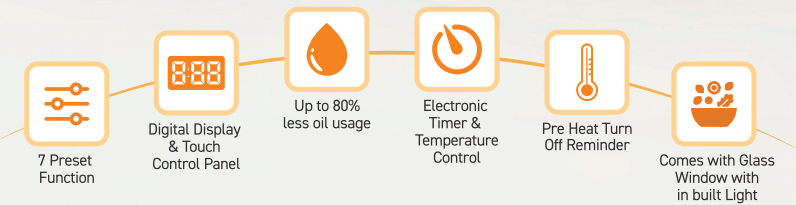

HOUSE of PURITY

Imported & Marketed by:
KENT RO SYSTEMS LTD.

E-6, Sector-59, Noida, U.P.-201 309, India.

For customer complaints, contact our Customer Care Officer at:
E-6, Sector-59, Noida, U.P.-201 309, India. Call: 92-789-12345
E-mail: service@kent.co.in or visit us at www.kent.co.in

Made in People's Republic of China



Capacity
8L



1700W

Welcome to KENT

Dear Customer,

Congratulations on your purchase and welcome to **KENT**.

At the outset, allow us to thank you for your trust in **KENT Smart Chef Appliances**. At KENT, we take pride in our reputation for quality products and industry proven performance. We are certain that you will be more than satisfied with **KENT Digital Air Fryer 8L** and that it will serve you and your family's requirements without any compromise.

This guide will help you in getting the best out of your appliance. Please go through the booklet to familiarise yourself with operation and maintenance of the product.

With its robust build and quality, you can look forward to years of trouble-free services.

To ensure that the warranty of your appliance is effective, it is important that you fill up the enclosed warranty card and mail it to us within 15 days of your purchase

In case you require any further information, please contact your nearest KENT dealer or branch.

Happy Living!

KENT RO Systems Ltd.

TABLE OF CONTENTS

1. Introduction	1
2. Features of KENT Digital Air Fryer 8L	1
3. Items in the box	1
4. Know your product	2
5. Using the appliance	5
6. Tips	8
7. Cleaning and maintenance.....	8
8. Storage	9
9. Important safety instruction.....	9
10. Troubleshooting.....	12
11. Technical specification	13

INTRODUCTION

We, at KENT have always believed that a clean and healthy life is a right of every individual. This ethos is what made us embark on the journey to develop innovative solutions for purifying the water we drink, vegetables and fruits we eat, homes we live in, and the air we breathe.

Use of innovative technologies and support from a competent service network have enabled us to create a brand which has become synonymous for well-being and health. Continuing with the tradition, we now present the KENT Digital Air Fryer 8L, your ultimate kitchen companion for healthier meals.

With its 8-litre large capacity and rapid air technology, cooks family-sized portions with up to 80% less oil. The glass window with a light feature helps monitor food easily. Enjoy convenience with digital controls and preset functions. Upgrade to healthier, tastier cooking with the KENT Digital Air Fryer 8L.

FEATURES OF KENT DIGITAL AIR FRYER 8L

1. Digital Display with Touch Screen Control Panel
2. Up to 80% less oil usage
3. Electronic Timer & Temperature Control
4. 7 Preset Function
5. Pre Heat Turn Off Reminder
6. Comes with Glass Window with in built Light

ITEMS IN THE BOX


1. KENT Digital Air Fryer 8L : 1N
2. Detachable non-stick rack : 1N
3. Detachable non-stick bucket : 1N
4. User Manual : 1N

KNOW YOUR PRODUCT







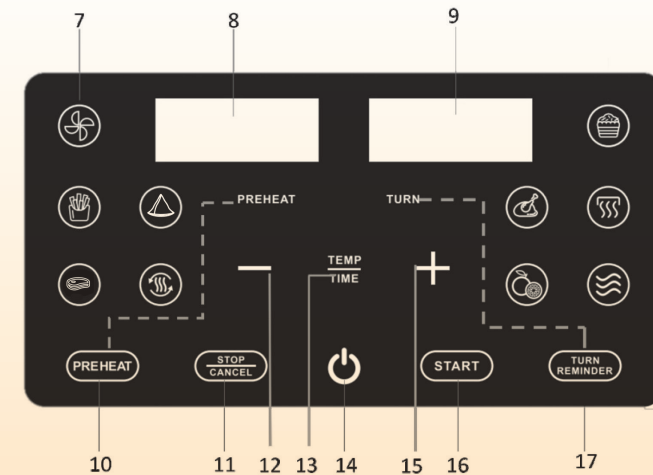





1. Control panel
2. Main Body
3. Window
4. Detachable non-stick rack
5. Detachable non-stick bucket 8 L
6. Bucket handle

CONTROL PANEL



7. Programs indication lights
8. Temperature display
9. Time display
10. "PREHEAT" button
11. STOP/CANCEL button
12. Temperature/time decrease button "-"
13. TEMP/TIME setting button
14. Power button
15. Temperature/time increase button "+"
16. "START" button
17. "TURN REMINDER" button

PROGRAM SETTING

Program	Temperature °C		Time (min)		Preheat		Turn Reminder	
	Default	Range	Default	Range	Default	Toggle	Default	Toggle
 Default Air Fry	200	80-200	20	1-60	✓	✓	✓	✓
 Fries	200	80-200	15	1-60	✓	✓	✓	✓
 Samosa	200	180-200	17	10-17	✓	✓	✓	✓
 Meat	190	80-200	6	1-60	NO	✓	NO	✓
 Reheat	150	80-200	15	1-60	NO	✓	NO	✓
 Cake	160	80-200	25	1 Min.- 2 hours	✓	✓	NO	✓
 Chicken	200	80-200	25	1 Min.- 2 hours	✓	✓	✓	✓
 Broil	200	80-200	12	1-60	✓	✓	✓	✓
 Dehydrate	60	40-80	8 hours	1 Min.- 24 hours	NO	NO	NO	✓
 Keep Warm	80	80-200	30	1 Min.- 8 hours	NO	NO	NO	NO

Note: ✓ Indicates that preheat and turn reminder can be turned on or off by pressing the respective PREHEAT or TURN REMINDER buttons before pressing the START button.

DISPLAY INDICATIONS AND SETTINGS

PREHEAT **TURN**
Preheat is enabled. Turn Reminder is enabled.

PRE HEAT

The air fryer is preheating.

Add Food

The air fryer is preheated.

Turn Food

Reminder to turn or toss food.

End

The cook time has elapsed.

Change temperature unit

To change the temperature unit from Celsius (C) to Fahrenheit (F) or vice versa, press and hold the TEMP/TIME button (13) until a beep is heard.

Disable/enable button sound


Press and hold the STOP/CANCEL button (11) until a sound is heard.

Note: Reminders are not muted.

BEFORE FIRST USE

Make sure the appliance is switched off and unplugged before use.

NOTE: Smoke and odours may occur during first use.

1. Place the appliance on a clean, flat and heat-resistant surface.
2. Place the rack (4) in the bucket (5).
Note: Do not use the appliance without the detachable rack.
3. Insert the bucket in the cavity without food until it snaps into place.
Note: If the bucket does not fit well into the cavity, the appliance will not turn on.
4. Plug in. A sound will be heard, all the lights on the control panel (1) will turn on for a while and then the power button (14) will remain on.
5. Press the power button (14). A beep will sound, the indication lights on the control panel will turn on, and the display will show "On".
6. Press the button . The indicator light will flash and the preset temperature (200°C) and the preset time (20 min) will appear on the display screen.
7. Press the "PREHEAT" button (10) and the "TURN REMINDER" button (17) to deactivate the functions.
8. Press TEMP/TIME button (13) till time flashes on the display.
9. Press the "-" button (12) successively to set 5 minutes.
10. Press "START" button (16) and the appliance will start.
11. When the program is complete, it will beep 5 times and the display will show End.
12. Press START button (16).
13. The appliance is ready for use.

USING THE APPLIANCE

1. It is recommended to preheat the appliance for 5 minutes without food before cooking.
2. Wash the parts of the appliance.
3. Place the appliance on a clean, flat and heat-resistant surface.
4. Place the rack (4) in the bucket (5).
Note: Do not use the appliance without the detachable rack.
5. Place the food on the rack (4) and insert the bucket (5) in the cavity until it snaps into place.
ATTENTION: If you select the preheating mode, you have to place the food in the bucket after preheating.
Note: Make sure the food in the bucket does not come into contact with the heating element.
Note: If the bucket with the rack does not fit well into the air fryer cavity, the appliance will not turn on.

6. Plug in. A sound will be heard, all the lights on the control panel (1) will turn on for a while and then the power button (14) will remain on.
7. Press the power button (14). A beep will sound, the indication lights on the control panel will turn on, and the display will show "On".
8. Press the button of the program of your choice
9. The program indicator you have selected and the "PREHEAT" and "TURN REMINDER" indicators will flash, and the preset temperature and preset time will appear on the display.
10. Press the TEMP/TIME button (13). The time will flash on the display.
11. Press the "-" (12) or "+" (15) buttons successively to set the time of your choice.
12. Press the TEMP/TIME button (13) again. The temperature will flash on the display.
13. Press the "-" (12) or "+" (15) buttons successively to set the temperature of your choice.
14. Press the "PREHEAT" button (10) to activate or deactivate the function. The indicator will turn on or off respectively.
Note: The time of the "PREHEAT" function is preset for each program.
15. Press the "TURN REMINDER" button (17) to activate or deactivate the function. The indicator will turn on or off respectively.
Note: If you do not activate the function reminder, it is recommended to stir the food inside the bucket for better results.
Note: PREHEAT and TURN REMINDER functions are enabled by default for certain programs.
16. Press START button (16) to start the program. The internal light will turn on and the selected time and temperature will appear on the display screen.
Note: If you have activated the preheat function, the display will show Pre HERE. Once the preheat is complete, a beep will sound and the display will show Add Food. Remove the bucket, place the food on the rack and put the bucket back in place. The program you have selected will start.
Note: If you have activated the turn reminder function, in the middle of the selected time, a sound will be heard and the display will show turn Food.
Remove the bucket turn or stir the food with plastic or wooden tools and put the bucket back in place. The program you have selected will continue. OR Press the STOP/CANCEL button once, turn or stir the food with plastic or wooden tools, put the bucket back in place and press the START button to continue the program you have selected.
17. When the selected program is finished, the internal light of the appliance will turn off, a sound will be heard 5 times, the display will show End and after a while the appliance will stop.
Note: If you want to stop the program before the selected time, press the STOP/CANCEL button (11) twice.
18. Press the power button (14).
19. Carefully remove the bucket from the cavity.
Note: Before serving, check that the food has been cooked. If it takes extra time to cook, repeat the process by adjusting the time and temperature. Cooking time depends on the density, thickness and humidity of the food.

Notes:

- Always hold the bucket by the handle. When removing the bucket, be careful as steam may escape.
- Serve using plastic or wooden tongs.
- If you want to change the time or temperature during operation, press the temperature/time adjustment button (13) and with the (12) or “+” (15) buttons, adjust the temperature or time respectively.
- If you want to change the program during operation, press the STOP/CANCEL button (11) twice. Select the program of your choice, set the temperature & time and press the START button (16).
- If you want to stop the program before the selected time, press the STOP/CANCEL button twice.
- Do not cover the device or place anything on it during use.
- Do not fill the basket with oil or any other liquid.
- Do not place flammable containers made of cardboard, paper, plastic and similar materials into the device.
- Do not place glassware, closed containers and similar materials that may break with the temperature.
- Do not use glass or ceramic utensils.
- In the event of an electricity disconnection, when the power is restored, the appliance will continue to work from the time it has stopped and complete the program you had set. Do not leave the appliance unattended.

TIPS

1. Smaller ingredients usually require a slightly shorter preparation time than larger ingredients.
2. A larger amount of ingredients only requires a slightly longer preparation time.
3. Shaking smaller ingredients halfway through the preparation time optimises the end result and can help prevent unevenly fried ingredients.
4. Add some oil to fresh potatoes for a crispy result. Fry your ingredients in the KENT Digital Air Fryer 8L within a few minutes after you added the oil.
5. Do not prepare extremely greasy ingredients such as sausages in the KENT Digital Air Fryer 8L. Snacks that can be prepared in an oven can also be prepared in the KENT Digital Air Fryer 8L.
6. The optimal amount for preparing crispy fries is 500 grams.
7. Use pre-made dough to prepare filled snacks quickly and easily. Pre-made dough also requires a shorter preparation time than home-made dough.
8. Place a baking tin or oven dish in the KENT Digital Air Fryer 8L basket if you want to bake a cake or quiche or if you want to fry fragile ingredients or filled ingredients.
9. You can also use the KENT Digital Air Fryer 8L to reheat ingredients. To reheat ingredients, set the temperature to 150° C for up to 10 minutes.

CLEANING AND MAINTENANCE

1. Clean the appliance after every use.
2. Switch off and unplug the appliance before cleaning it.
3. Remove the frying pot and clean it with the lukewarm water & soap. Use a cleaning brush, never use scouring pads to clean it.
4. Wipe the outside of the appliance with a moist cloth and non-abrasive sponge.
5. Do not immerse the appliance in water or any liquid.
6. Clean the heating element with a cleaning brush to remove any food residues.
7. Never put any part of the appliance in the dishwasher.
8. After cleaning it thoroughly, dry it using a soft cloth.
9. Ensure that the appliance is completely dry before storing.

STORAGE

1. Unplug the appliance and let it cool down.
2. Make sure all parts are clean and dry.

IMPORTANT SAFETY INSTRUCTION

When using electrical appliances, basic safety precautions should always be followed including the following:

1. Unplug, when not in use and before servicing.
2. Check if the voltage indicated on the appliance corresponds to the local mains voltage before you connect the appliance
3. To reduce the risk of electric shock, do not use near or on wet surfaces.
4. Always put the ingredients to be fried in the pan, to prevent it from coming into contact with the heating elements.
5. Do not use the appliance if the cord plug is damaged or worn out, replace the damaged cord or plug immediately.
6. Do not try to service the appliance on your own. Send it to the authorised service centre only.
7. Keep cord away from heated surfaces.
8. Do not unplug the appliance by pulling the cord, always unplug by pulling the plug and not by the cord.
9. Keep hair, loose clothing, fingers and all parts of the body away from moving parts.
10. This appliance is suitable for indoor use only
11. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge, if they have been given supervision. Children shall not play with the appliance.

WARRANTY CARD

Product: **KENT Digital Air Fryer 8L**

Product Code: 116166

Serial No.:..... Dealer Stamp:.....

Customer Details:

Customer's Name:

Customer's Address:

Customer's Phone No.:

Warranty Details:

Invoice Date:..... Invoice No.:



SERVICE

KENT
Smart Chef
Appliances

* To request for service 24x7,
download KENT Service App
by scanning
the QR code
or by giving
a missed call:
9212252852

To speak to customer care executive call: 92-789-12345

Imported & Marketed by:
KENT RO SYSTEMS LTD.
E-6, Sector-59, Noida, U.P.-201 309, India.

TERMS & CONDITIONS OF WARRANTY

KENT warrants all new products manufactured by it to be free from defects in material and workmanship under normal usage and service from the date of purchase as under:

- The Warranty period commences from the date of purchase by the first end-user. During this Warranty period of one year, KENT or its Authorised Service Provider (ASP) will replace or repair any part of KENT Digital Air Fryer 8L, that in the opinion of KENT or its ASP, would be defective in operation due to faulty material or workmanship (i.e. manufacturing defects) with the exception of consumables.
- The product's plastic body is not covered under Warranty and hence, it must be handled with care to guard against breakage.
- The original purchaser of the unit can avail services under Warranty at the point of sale by producing the damaged part(s) along with the original invoice.
- This Warranty is void if the unit is not operated under normal conditions or according to the instructions given in the manual.
- Product returned to KENT or its ASP for Warranty examination must be shipped freight prepaid.
- KENT or its ASP shall not be held liable for claims exceeding the cost of repair of the defects in workmanship.
- This Warranty Agreement shall not be interpreted to render KENT or its ASP liable for injuries or damages of any kind - direct, consequential or contingent to persons or property.
- KENT or its ASP shall not be held responsible by representative or buyer for failure to abide by any of the obligations of this Warranty Agreement, if such failures are the result of circumstances of Forces Majeure such as (but not limited to), floods, earthquakes, transportation strikes, labour disputes with outside suppliers or any other conditions beyond the control of KENT or its ASP.
- KENT or its ASP shall not be held liable for repair or alterations made without prior written approval for product failures resulting from the lack of proper maintenance.
- This Warranty Agreement excludes all products/component parts or damage to any part of this KENT Digital Air Fryer 8L which in the opinion of KENT or its ASP have been subjected to misuse; misapplication; negligence; alteration; accident or operation contrary to our instructions. Incompatibility with accessories not installed by KENT or its ASP, or that have been repaired with component parts other than those manufactured by or obtained from KENT or its ASP. Damage caused by freezing, flood, fire or Act of God is not covered by this Warranty. In all such cases, regular charges will apply. This limited Warranty does not include service to diagnose a claimed malfunction in this unit.
- KENT reserves the right to alter or improve design and specifications at any time, without any contingent obligations to prospective buyers or owners of the products previously sold.
- Any disagreements and obligations based upon the purchase of KENT products and thereby imposed on KENT or its ASP shall be governed by and construed according to the laws of INDIA and subject to the jurisdiction of Delhi Courts only.
- KENT or its ASP assumes No Warranty liability in connection with this KENT Digital Air Fryer 8L other than that specified herein. This Warranty is in lieu of all other warranties, expressed or implied, including warranties of fitness for a particular purpose. KENT or its ASP does not authorise any person or representative to assume for them any other obligations on the sale of this KENT Digital Air Fryer 8L.
- Under no circumstances, the liability of KENT or its ASP shall exceed the value of the product.
- Under no circumstances are the terms mentioned above negotiable and no employee of KENT or its ASP has the authority to supersede them.

TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	SOLUTION
The KENT Digital Air fryer 8L does not work	The appliance is not plugged in.	Put the mains plug in an earthed wall socket.
The food in the KENT Digital Air fryer 8L is undercooked.	1. The amount of ingredients in the frying pot is too much.	1. Put smaller batches of ingredients in the pot. Smaller batches are fried more evenly.
	2. The set temperature is too low.	2. Set the temperature to the required temperature setting
	3. The preparation time is too short.	3. Set the time to the required preparation time.
The ingredients are fried unevenly in the air fryer.	Certain types of ingredients need to be shaken halfway through the preparation time.	Ingredients that lie on top of or across each other (e.g. fries) need to be shaken halfway through the preparation time.
Fried snacks are not crispy when they come out of the air fryer.	You used a type of snacks meant to be prepared in a traditional deep fryer.	Use oven snacks or lightly brush some oil onto the snacks for a crispier result.
Cannot slide the frying pot into the appliance properly.	1. There are too much ingredients in a frying pot.	1. Do not fill the basket beyond the MAX indication.
	2. The frying pot is not placed correctly.	2. Push frying pot into the main housing properly
White smoke comes out of the appliance.	1. You are preparing greasy ingredients.	1. When you fry greasy ingredients in the air fryer, a large amount of oil will leak into the pot. The oil produces white smoke and the pot may heat up more than usual. This does not affect the appliance or the end result.
	2. The pot still contains grease residues from previous use.	2. White smoke is caused by grease heating up in the frying pot. Make sure you clean the frying pot properly after each use.
Fresh fries are fried unevenly in the air fryer	1. You did not use the right potato type.	1. Use fresh potatoes and make sure they stay firm during frying.
	2. You did not rinse the potato sticks properly before you fried them.	2. Rinse the potato sticks properly to remove starch from the outside of the sticks.
Fresh fries are not crispy when they come out of the air fryer.	The crispiness of the fries depends on the amount of oil and water in the fries.	1. Make sure you dry the potato sticks properly before you add the oil.
		2. Cut the potato sticks smaller for a crispier result.
		3. Add slightly more oil for a crispier result.

TECHNICAL SPECIFICATION

Product	KENT Digital Air Fryer 8L
Product code	116166
Net Weight	5.5 kg
Input Power Supply	Single Phase 230V AC, 50 Hz.
Power Consumption	1700 W
Product Dimensions	400 (L) x340 (W) x 375 (H) mm