



HOUSE of PURITY

Marketed by:
KENT RO SYSTEMS LTD.
E-6, Sector-59, Noida, U.P.-201 309, India.
E-mail: sales@kent.co.in | Website: www.kent.co.in

Manufactured by:
KENT RO SYSTEMS LTD.
A-6, Sector-87, Noida-201 305, U.P., India.

For customer complaints, contact our Customer Care Officer at:
E-6, Sector-59, Noida, U.P.-201 309, India. Call: 92-789-12345
E-mail: service@kent.co.in or visit us at www.kent.co.in

Made in India

KENT HAND BLENDER+ CHOPPER 450W

CHOPS, WHISKS, BLENDS & PUREES



Instruction Manual

IS 302-2-14



CM/L-8700097421



Welcome to KENT

Dear Customer,

Congratulations on your purchase and welcome to **KENT**.

At the outset, allow us to thank you for your trust in **KENT Smart Chef Appliances**. At KENT, we take pride in our reputation for quality products and industry proven performance. We are certain that you will be more than satisfied with **KENT Hand Blender + Chopper 450W** performance and that it will serve you and your family without any compromise.

This guide will help you in getting the best out of your appliance. Please go through the booklet to familiarize yourself with its operations and maintenance.

With its robust built and high quality, you can look forward to years of trouble-free service.

In case you require any further information, please contact your nearest **KENT** dealer or branch.

Bon Appetit!

KENT RO Systems Ltd.

TABLE OF CONTENTS

1. Introduction	1
2. Features of KENT Hand Blender+Chopper 450W	1
3. Know Your Product	2
4. Items in the Box	2
5. Using the Product	2
6. How to Operate	3
7. Using Attachments	3
8. Cleaning and Maintenance	4
9. Precautions	4
10. Important Safety Instructions	5
11. Troubleshooting	6
12. Technical Specifications	7

INTRODUCTION

We, at KENT, have always believed that a clean and healthy life is the right of every individual. This ethos is what made us embark on the journey to develop innovative solutions for purifying the water that we drink, vegetables and fruits that we eat, homes we live in and the air that we breathe.

Use of innovative technology and support from a competent service network have enabled us to create a brand, which has become synonymous to well-being and health. Continuing with the tradition, we now present the KENT Hand Blender+Chopper 450W- a sleek stainless steel kitchen appliance that you'll treasure forever.

KENT Hand Blender+Chopper 450W is ergonomically designed for convenience of handling. Using it will significantly speed up your cooking process as your ingredients, be it hot or cold, will get blended in no time. While the regular blenders and food processors that we mostly find in the market are cumbersome and difficult to use, the KENT Hand Blender+Chopper 450W offers both versatility and ease of use. To add on to that, its stylish design makes it the smart kitchen appliance that you've always wanted.

FEATURES OF KENT HAND BLENDER+CHOPPER 450W

1. KENT Hand Blender + Chopper 450W, Chops, Whisks, Blends & Purees
2. Turbo Switch
3. Variable Speed Control
4. Food Grade SS 304 Blade and body
5. LED Light to Indicate the Working Mode
6. Low Noise DC Motor

KNOW YOUR PRODUCT

1. Variable speed control
2. Blue LED
3. Switch on/off
4. Turbo button
5. Power handle
6. Blender
7. Chopper
8. Whisker
9. Jar



ITEMS IN THE BOX

- | | |
|-------------------------------------|------|
| 1. KENT Hand Blender + Chopper 450W | : 1N |
| 2. Chopper | : 1N |
| 3. Whisker | : 1N |
| 4. Jar | : 1N |
| 5. Warranty Card | : 1N |

USING KENT HAND BLENDER+CHOPPER 450W

- Remove any sticker or blade cover that might prevent the unit from operating properly
- Check the unit for damages. Do not use in case of any damage
- Before switching on the appliance, make sure that your home's mains voltage corresponds to the unit's operating voltage
- Clean the parts of the KENT Hand Blender+Chopper 450W before using the appliance for the first time (see 'Cleaning & Maintenance' section)
- Make sure all parts are completely dry before you start using the appliance

Note: Do not immerse the 'power handle' in water or any other liquid.

HOW TO OPERATE

- Fit the suitable attachment to the power handle. Turn & lock.
- Plug in to the power socket.
- Select the required speed then press the on/off switch. (Select a low speed for slower blending and to reduce splashing; select a high speed or press turbo button for faster blending).
- To avoid splashing, place the KENT Hand Blender + Chopper 450W in the food before switching on.
- Do not let liquid get above the joint between the power handle and blender shaft.
- If your blender gets blocked, unplug before cleaning.
- After use, release the detachable shaft and clean before storing.

USING ATTACHMENTS

- **Blender**- This attachment is ideal for blending & pureeing. You can also blend food directly in a cooking pot or a saucepan.
- **Chopper**- It is ideal to chop vegetables. Turbo switch helps to chop vegetables instantly.
- **Whisker**- It is ideal to whisk batters, cream & make frothy drinks.

TIP

- With heavy mixtures, don't use your KENT Hand Blender+ Chopper 450W for longer than 30 seconds. A duration of 4 continuous minutes or more might cause overheating.
- Care must be taken when handling the detachable shaft during cleaning, as it has sharp blades.
- Only use your KENT Hand Blender+Chopper 450W for its intended domestic use.

CLEANING & MAINTENANCE

- Switch off and unplug the appliance before cleaning it.
- Wipe the main unit with a moist cloth and a non-abrasive liquid cleaner.
- Do not immerse the power handle in water or any other liquid.
- Never put any part of the appliance in the dishwasher.
- After cleaning the power handle, dry it using a soft cloth.
- Ensure that the appliance is completely dry, before storing it.

Note: Never immerse the motor unit (power handle) of the blender in water, nor rinse it under the tap. Simply wipe it with a dry cloth.

PRECAUTIONS

- Do not disassemble, repair or alter the machine on your own. It may cause appliance failure or breakdown.
- The input voltage must not exceed the rating; it might damage the appliance.
- Unplug before cleaning or moving the appliance.
- Do not use the appliance with damaged power cord or plug.
- If power cord is damaged, replace it with a genuine KENT spare.
- Do not install the machine near any heat source, e.g., heater.
- If the appliance is not in use for a longer time, unplug it.
- Do not use the appliance when it is in a recumbent or inclined position.

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should always be followed, including the following:

1. Unplug, when not in use and before servicing.
2. To reduce the risk of electric shock, do not use near or on wet surfaces.
3. Use the appliance only as described in this manual.
4. Do not use the appliance if cord or plug is damaged or worn out. Replace the damaged cord or plug immediately.
5. Do not try to service the appliance on your own. Send it to an authorized service center only.
6. Keep the cord away from heated surfaces.
7. Do not unplug the appliance by pulling the cord. Always unplug by pulling the plug instead.
8. To avoid electric shocks, do not use the appliance with wet hands.
9. Keep hair, loose clothing, fingers and all parts of body away from the moving parts.
10. Turn all controls Off before you unplug the unit.
11. This appliance is suitable for indoor use only.
12. Keep away from children.
13. The appliance is not designed to be used by people who, are physically or mentally disabled or mentally handicapped or lack relevant experience and knowledge, unless a person responsible for their safety uses the product for supervision or guidance.

TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	POSSIBLE SOLUTION
The appliance does not start.	There is a connection problem.	Check if the appliance is connected to the mains and if the plug is inserted firmly into the wall socket.
	The appliance is defective.	Switch-off the appliance and unplug it. Go to the nearest KENT authorized service centre for assistance.
The appliance suddenly stops working while running.	The appliance has over-heated.	Let the appliance cool down for 20 minutes before attempting to restart it.
	The appliance is defective.	Switch off the appliance and unplug it. Go to the nearest KENT authorised service centre for assistance.
The appliance makes lots of noise.	Blades are not working properly, or are clogged.	Clean the blades, If problem persists, replace blades at KENT authorised service centre.

TECHNICAL SPECIFICATIONS

Product	KENT Hand Blender+Chopper 450W
Product Code	116158
Product Dimensions (mm)	53 (L) X 57 (W) X 370 (H)
Net Weight	0.94 kg
Power Consumption	450 W
Input Power Supply	Single Phase 230 V AC, 50 Hz, Class II