

KENT SHARP

MIXER GRINDER

Powerful & Reliable in
its Class

User Manual

KENT
Smart Chef
Appliances

HOUSE of PURITY



**3 STAINLESS
JARS**

- 1.3 L Wet Blending Jar
- 1 L Dry Grinding Jar
- 0.4 L Chutney Jar



**POWERFUL
600W**

IS 4250



CM/L- 9600032713

Welcome to KENT

Dear Customer,

Congratulations on your purchase and welcome to **KENT**.

At the outset, allow us to thank you for your trust in **KENT Smart Chef Appliances**.

At **KENT**, we take pride in our reputation for quality products that have industry-proven performance. We are certain that you will be more than satisfied with the performance of our **KENT Sharp Mixer Grinder** and that it will serve you and your family's needs without any compromise.

This guide will help you in getting the best out of your appliance. Please go through the booklet to familiarize yourself with operation and maintenance.

With the robust quality, you can look forward to years of trouble-free service.

To ensure that the warranty of your appliance is effective, you must fill up the enclosed warranty card and mail it to us within 15 days of purchase.

Please contact your nearest **KENT** dealer if you require any further information.

Bon Appetit!

KENT RO Systems Ltd.

TABLE OF CONTENTS

1. Introduction.....	1
2. Features of KENT Sharp Mixer Grinder	1
3. Know Your Product	1
4. Items in the Box	2
5. Using KENT Sharp Mixer Grinder	2
6. How to Operate	2
7. Cleaning and Maintenance	3
8. Precautions	4
9. Important Safety Instructions.....	4
10. Troubleshooting	5
11. Technical Specifications	6

INTRODUCTION

We at **KENT** have always believed that a clean and healthy life is the right of every individual. This ethos made us embark on the journey to develop innovative solutions for purifying the water we drink, the vegetables and fruits we eat, the homes we live in and the air we breathe.

With the use of innovative technology and the support of a competent service network, we have been able to create a brand that has become synonymous with well-being and health. Continuing with this tradition, we now present the **KENT Sharp Mixer Grinder**, a new-age high-speed mixer and blender for your home that works like magic.

The **KENT Sharp Mixer Grinder** isn't just any other kitchen appliance. The 3 SS jars ensure hygiene, while the ABS plastic body of the main device makes it suitable for regular use, even for longer periods.

Above all, it reduces food preparation time to minutes.

FEATURES OF KENT SHARP MIXER GRINDER

- Made with high quality food grade stainless steel jars and blade for hygienic operation and durability
- Pulse function for quick operation
- Ideal for blending fruits & vegetables and grinding coffee beans & spices
- Auto switch off for overheating
- Spill proof lids with jars

KNOW YOUR PRODUCT



ITEMS IN THE BOX

- | | |
|-----------------------------|-------|
| 1. Sharp Mixer Grinder Base | : 1 N |
| 2. SS Wet Blending Jar 1.3L | : 1 N |
| 3. SS Dry Grinder Jar 1L | : 1 N |
| 4. SS Chutney Jar 0.4L | : 1 N |
| 5. Warranty Card | : 1 N |

USING KENT SHARP MIXER GRINDER

1. Remove any stickers that might prevent the unit from operating smoothly.
2. Check the unit for damages. Do not use in case of any damage.
3. Before switching on the appliance, make sure that your home voltage corresponds to the unit's operating voltage.
4. Clean all the parts of the **KENT Sharp Mixer Grinder** before using the appliance for the first time (see 'Cleaning & Maintenance' section).
5. Make sure all parts are completely dry before you start using the appliance.

HOW TO OPERATE

1. Ensure the power switch is in the off position before placing the jar on the motor unit.
2. Add desired ingredients.
3. Securely place the lid above the jar.
4. Plug in and switch it on (keep hand on the lid while operating).
5. Once done proceed to clean the appliance before storing it.

MODES

BLENDING MODE

1. Put food and liquid in the SS wet blending jar.
 2. Put the lid on the SS jar and secure it tightly.
 3. Place the SS jar on the motor base.
 4. Switch 'ON'. Use desired speeds as described
 - 1 – Low speed: Most suited for blending and shakes
 - 2 – Medium speed
 - 3 – High speed: Most suited for grinding and crushing
 - P – Pulse use: Most suited for shorter bursts of blending and for crushing ice
 - 0 – Off
5. Once finished, turn off and unplug.
 6. Remove the SS wet blending jar by lifting it.

GRINDING MODE

1. Fill the SS dry grinding jar with ingredients (not more than 50% of the capacity).
2. Put the lid on the SS jar and secure it tightly.
3. Place the jar on the motor base.
4. Switch 'ON'. Use desired speeds as described
 - 1 – Low speed: Most suited for blending and shakes
 - 2 – Medium speed
 - 3 – High speed: Most suited for grinding and crushingP – Pulse use: Most suited for shorter bursts of blending and for crushing ice
O – Off
5. Once finished, turn off and unplug.
6. Remove the SS dry grinding jar by lifting it.

CHUTNEY MODE

1. Fill the SS chutney jar with ingredients (not more than 50% of the capacity).
2. Place the SS jar on the motor base.
3. Switch 'ON'. Use desired speeds as described
 - 1 – Low speed: Most suited for blending and shakes
 - 2 – Medium speed
 - 3 – High speed: Most suited for grinding and crushingP – Pulse use: Most suited for shorter bursts of blending and for crushing ice
O – Off
4. Once finished, turn off and unplug.
5. Remove the SS chutney jar by lifting it.

CLEANING & MAINTENANCE

- Switch off and unplug the appliance before cleaning it
- Remove the lid and clean the jar with warm water and soap solution with the help of a cleaning brush. Never use scouring pads to clean
- Wipe the main unit with a moist cloth and a non-abrasive liquid cleaner
- Do not immerse the appliance in water or any other liquid
- Never put any part of the appliance in the dishwasher
- After cleaning it thoroughly, dry it using a soft cloth
- Ensure that the appliance is completely dry before storing it

Note: Never immerse the motor unit of the blender in water, nor rinse it under the tap

PRECAUTIONS

- Do not disassemble, repair or alter the appliance on your own. It may cause appliance failure or breakdown
- The input voltage must not exceed the rating, it might damage the appliance
- Unplug before cleaning / moving the appliance
- Do not use the appliance with a damaged power cord or plug
- Do not use the appliance near any heat source
- If the appliance is not used for a long time, unplug it
- Do not use the appliance when it is in a recumbent or inclined position
- Do not operate the jars without the lid on them
- Chop food before putting them to mix for better crushing
- While making chutneys or any paste – please put hand on top of the lid to avoid spilling of the liquid
- To avoid overheating of the product - use it for 5 mins, rest for 2 mins & continue the process accordingly to get desired results
- In case of overheating, turn the knob off and rest for 20 mins and push the button at the base of the machine and restart
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard

IMPORTANT SAFETY INSTRUCTIONS


When using an electrical appliance, basic precautions should always be followed, including the following:

1. Unplug, when not in use and before servicing.
2. Always increase the speed gradually a) Low speed – 30s, b) Medium speed – 60s, c) High speed – 90s.
3. To reduce the risk of electric shocks, do not use near or on wet surfaces.
4. Use the appliance only as described in the manual.
5. Do not use the appliance if the cord or the plug is damaged or worn out. Replace the damaged cord or plug immediately.
6. Do not try to service the appliance on your own. Send it to an authorized service center only.
7. Keep the cord away from heated surfaces.
8. Do not unplug the appliance by pulling the cord. Always unplug by pulling out the plug.
9. To avoid electric shocks, do not use the appliance with wet hands.
10. Keep hair, loose clothing, fingers and all parts of the body away from moving parts.
11. Turn all controls off before unplugging.
12. This appliance is suitable for indoor use only.
13. Keep away from children.

TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	POSSIBLE SOLUTION
The appliance does not start.	There is connection problem.	Check if the appliance is connected to the mains and if the plug is inserted firmly into the wall socket.
	The jar is not placed properly.	
	The appliance is defective.	Switch off the appliance and unplug it. Go to the nearest KENT authorized service centre for assistance.
The appliance suddenly stops working while running.	The appliance has overheated.	Let the appliance cool for 20 - 30 minutes.
	The appliance is overloaded.	Remove some ingredients, add some water and try again.
	The appliance is defective.	Switch off the appliance and unplug it. Go to the nearest KENT authorised service centre for assistance.
The appliance make slots of noise.	The jar is not placed properly.	Reposition the jar in the correct position.
	The blender's inner drive is broken.	Switch off the appliance and unplug it. Go to the nearest KENT authorised service centre for assistance.
Motor does not work properly.	The appliance is defective.	Switch off the appliance and unplug it. Go to the nearest KENT authorised service centre for assistance.

TECHNICAL SPECIFICATIONS

Product	KENT Sharp Mixer Grinder
Product Code	116128
Product Generic Name	Mixer & Grinder
Net Weight	2.85 kg
Input Power Supply	Single Phase 230 V AC, 50 Hz,  , Insulation Class F
Total Power Consumption	600 W
SS Wet Blending Jar	1.3 L
SS Dry Grinding Jar	1 L
SS Chutney Jar	0.4 L



HOUSE of PURITY



Marketed by:

KENT RO SYSTEMS LTD.

E-6, 7 & 8, Sector-59, Noida, U.P.-201 309, India.

E-mail: sales@kent.co.in

Manufactured by:

Expo Sales (India) Pvt. Ltd.,

Khasra No. 7/2, Opp. Chintamani School, Village - Buranwala,
Post - Barotiwala, Baddi, Distt. Solan - 174103, Himachal Pradesh

For customer complaints,

contact our Customer Care Officer at:

E-6, 7 & 8, Sector-59, Noida, U.P.-201 309, India.

Call: 92-789-12345

E-mail: service@kent.co.in or visit us at www.kent.co.in