



Marketed by:
KENT RO SYSTEMS LTD.
E-6, 7 & 8, Sector-59, Noida, U.P.-201 309, India.
E-mail: sales@kent.co.in

For customer complaints, contact our Customer Care Officer at:
E-6, 7 & 8, Sector-59, Noida, U.P.-201 309, India. Call: 92-789-12345
E-mail: service@kent.co.in or visit us at www.kent.co.in

Manufactured by:
JEE ENGINEERS
E 109, Sector 63, Noida - 201 307 (U.P.), India.

KENT SMART NUTRI BLENDER

The Smart Choice for Modern Kitchen



Instruction Manual



600 ml PC Jar

300 ml PC Jar

400 ml SS Jar

IS 4250:1980



CM/L 8700090112



Blending Jar

Chutney Jar

Grinding Jar

Welcome to KENT

Dear Customer,

Congratulation on your purchase and welcome to **KENT**.

At the outset, allow us to thank you for your trust in **KENT Smart Chef Appliances**. At KENT, we take pride in our reputation for quality products and industry proven performance. We are certain that you will be more than satisfied with **KENT Smart Nutri Blender's** performance and that it will serve you and your family without any compromise.

This guide will help you in getting the best out of your appliance. Please go through the booklet to familiarize yourself with its operation and maintenance.

With the robust build and high quality, you can look forward to years of trouble-free service.

In case you require any further information, please contact your nearest **KENT** dealer or branch.

Bon Appétit!

KENT RO Systems Ltd.

TABLE OF CONTENTS

1. Introduction.....	1
2. Features of KENT Smart Nutri Blender.....	1
3. Know Your Product.....	1
4. Items in the Box.....	2
5. Using KENT Smart Nutri Blender.....	2
6. Operating Modes.....	2
7. How to Operate.....	3
8. Cleaning and Maintenance.....	3
9. Precautions.....	3
10. Important Safety Instructions.....	4
11. Troubleshooting.....	5
12. Technical Specifications.....	6

INTRODUCTION

We, at KENT, have always believed that a clean and healthy life is the right of every individual. This ethos is what made us embark on the journey to develop innovative solutions for purifying the water that we drink, vegetables and fruits that we eat, homes that we live in and the air that we breathe.

Use of innovative technology and support from a competent service network have enabled us to create a brand, which has become synonymous to well-being and health. Continuing with the tradition, we now present the **KENT Smart Nutri Blender**, a new age, high-speed portable blender that works like magic.

KENT Nutri Blender is not your ordinary kitchen appliance. It's designed to save time so that you are done with your kitchen chores in a matter of minutes. Unlike bulky blenders and unwieldy food processors that most of us only pull out of storage for specific recipes and special occasions, **KENT Smart Nutri Blender** is so handy, so versatile and so easy to use that you'll put it to work every single day.

FEATURES OF KENT SMART NUTRI BLENDER

- Portable multi-functional - blender and grinder
- High speed operation, runs at 20000 rpm
- 3-In-1: Blends, grinds and makes Smoothies
- Prepares purees, chutney, shakes and Smoothies
- Blade made from high carbon stainless steel for high durability & life
- Versatile and easy to use

KNOW YOUR PRODUCT



ITEMS IN THE BOX

- | | | | |
|----|--------------------------|---|-----|
| 1. | KENT Smart Nutri Blender | : | 1 N |
| 2. | Blender Jar | : | 1 N |
| 3. | Grinder Jar | : | 1 N |
| 4. | Chutney Jar with lid | : | 1 N |
| 5. | User Manual | : | 1 N |
| 6. | Cap | : | 2 N |

USING KENT SMART NUTRI BLENDER

1. Remove any stickers that might prevent from operating the unit.
2. Check the unit for damages. Do not use in case of any damages.
3. Before switching on the appliance, make sure that your home's mains voltage corresponds to the unit's operating voltage.
4. Clean the parts of the **KENT Smart Nutri Blender** before using the appliance for the first time (see 'Cleaning & Maintenance' section).
5. Make sure all parts are completely dry before you start using the appliance.

OPERATING MODES

Blending Mode

Ideal for:

- Purees
- Milk shakes
- Shakes
- Smoothies

Grinding / Chutney Mode

Ideal for:

- Cereals
- Chutney
- Masala

HOW TO OPERATE

Blending Mode

1. Unlid the blender bottle and add the ingredients in the Jar 2/3rd Capacity
2. Add milk or water as per the taste or requirement.
3. Secure the blender blade assembly tightly in place on the Jar.
4. Turn the bottle upside down and place it on the motor base unit.
5. Turn the appliance on at low speed for 15 second & go to higher speed as per Requirement.
6. Once done, switch off the appliance. Turn counter clockwise and unmount the blending jar.
7. Replace the blender blade assembly with a normal lid and keep in fridge for later use.
8. Please use 4-leaf blade (+) with blender jar.

Grinding Mode

1. Unlid the grinding jar and add the ingredients.
2. Secure the sprinkle lid tightly.
3. Turn the jar upside down and place on the motor base kept on a firm place.
4. Turn the appliance on at low speed for 15 second & go to higher speed as per Requirement.
5. Once done, switch off the appliance. Turn counter clockwise and unmount the grinding jar.
6. Secure the blender blade assembly tightly in place on the Jar
7. Please use 2-leaf blade (-) with grinder jar

Chutney Mode

1. Fill the jar with ingredients (not more than 50% of the capacity) and screw back to the base.
2. Place the SS Chutney Jar on the motor base.
3. Turn the appliance on at low speed for 15 second & go to higher speed as per Requirement.
5. Once done, switch off the appliance. Turn counter clockwise and unmount the chutney jar.
6. Remove the SS Chutney Jar by lifting it.
7. Secure the blender blade assembly tightly in place on the Jar.

CLEANING & MAINTENANCE

- Switch off and unplug the appliance before cleaning it
- Remove the lid and clean the blender bottle with a solution of lukewarm water & soap
Use a cleaning brush, never use scouring pads to clean it
- Wipe the main unit with a moist cloth and a non-abrasive liquid cleaner
- Do not immerse the appliance in water or any other liquid
- Never put any part of the appliance in the dishwasher

- After cleaning it thoroughly, dry it using a soft cloth
- Ensure that the appliance is completely dry before storing it

Note: Never immerse the motor unit of the blender in water, nor rinse it under the tap. Wipe it with a dry cloth

PRECAUTIONS

- Do not disassemble, repair or alter the appliance on your own
It may cause appliance failure or breakdown
- The input voltage must not exceed the rating, it might damage the appliance
- Unplug before cleaning / moving the appliance
- Do not use the appliance with a damaged power cord or plug
- Do not use the appliance near any heat source
- If the appliance is not in use for a longer time, unplug it
- Do not use the appliance when it is in a recumbent or inclined position

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should always be followed, including the following:

1. Unplug, when not in use and before servicing.
2. To reduce the risk of an electric shock, do not use near or on wet surfaces.
3. Use the appliance only as described in the manual.
4. Do not use the appliance if cord or plug is damaged or worn out. Replace the damaged cord or plug immediately.
5. Do not try to service the appliance on your own. Send it to an authorized service center only.
6. Keep cord away from heated surfaces.
7. Do not unplug the appliance by pulling the cord. Always unplug by pulling the plug.
8. To avoid electric shocks, do not use the appliance with wet hands.
9. Keep hair, loose clothing, fingers and all parts of body away from moving parts.
10. Turn all controls off before unplugging.
11. This appliance is suitable for indoor use only.

TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	POSSIBLE SOLUTION
The appliance does not start.	The appliance stops working	It can be reset by simply pressing CB once on the base of unit.
	There is a connection problem.	Check if the appliance is connected to the mains and if the plug is inserted firmly into the wall socket.
	The appliance is defective.	Switch off the appliance and unplug it. Go to the nearest KENT authorized service centre for assistance
The appliance suddenly stops working while running.	The appliance stops working	It can be reset by simply pressing CB once on the base of unit.
	The appliance has overheated.	Let the appliance cool for 20 minutes before attempting to restart it.
	The appliance is overloaded.	Remove some ingredients, add some water and try again.
	The appliance is defective.	Switch off the appliance and unplug it. Go to the nearest KENT authorised service centre for assistance.
The appliance makes lots of noise.	Jar is not placed properly.	Reposition the Jar in the correct position and tighten the Jar .
	Problem with blender's inner drive broken.	Switch off the appliance and unplug it. Go to the nearest KENT authorized service centre for assistance.
Motor does not work properly.	Appliance is defective.	Switch off the appliance and unplug it. Go to the nearest KENT authorised service centre for assistance.

TECHNICAL SPECIFICATIONS

Product	KENT Smart Nutri Blender
Product Code	116067
Product Generic Name	Mixer & Blender
Product Colour	White
Net Weight	1.97 kg
Product Dimension (mm)	136 (L) x 150 (W) x 188 (H)
Input Power Supply	Single Phase 230 V, AC 50 Hz.
Total Power Consumption	450 W