

KENT
Smart Chef
Appliances
HOUSE of PURITY



Marketed by:
KENT RO SYSTEMS LTD.
E-6, 7 & 8, Sector-59, Noida, U.P.-201 309, India.
E-mail: sales@kent.co.in

Manufactured by:
VL APPLIANCE INDIA PRIVATE LIMITED
Factory: No.5/126B, Molapalayam Road, Vellanaipatti,
Coimbatore - 641 048, India.


For customer complaints, contact our Customer Care Officer at:
E-6, 7 & 8, Sector-59, Noida, U.P.-201 309, India.
Call: 92-789-12345
E-mail: service@kent.co.in or visit us at www.kent.co.in

KENT WET GRINDER

POWERFUL, SAFE AND NOISELESS WET GRINDING

KENT
Smart Chef
Appliances
HOUSE of PURITY

Instruction Manual

-  Encased Rotating Drum for Safe Operations
-  Low Noise Due to Encasing
-  Wet Grinding of all kinds of batter Dosa, Idli, Vada, Scrapping Coconut & Kneading Atta
-  Variable Time Setting
-  High Power Motor

1ST IN THE MARKET
WITH ENCASING
Patent Pending. Registered Design



Welcome to KENT

Dear Customer,

Congratulations on your purchase and welcome to **KENT**.

At the outset, allow us to thank you for your trust in **KENT Smart Chef Appliances**. At KENT, we take pride in our reputation for quality products and industry proven performance. We are certain that you will be more than satisfied with **with KENT Wet Grinder's** performance and that it will serve you and your family's need without any compromise.

This guide will help you in getting the best out of your appliance. Please go through the booklet to familiarize yourself with operation and maintenance.

With the robust quality, you can look forward to years of trouble-free service.

In case you require any further information, please contact your nearest **KENT** dealer or branch.

Bon Appepite!

KENT RO Systems Ltd.

TABLE OF CONTENTS

1. Introduction	1
2. Features of KENT Wet Grinder.....	1
3. Know your Product	1
4. Items in the Box.....	2
5. Using KENT Wet Grinder	2
6. How to Operate	2
7. Cleaning and Maintenance.....	3
8. Precautions.....	3
9. Important Safety Instructions	4
10. Troubleshooting	5
11. Technical Specifications	6

INTRODUCTION

We, at KENT, have always believed that a clean and healthy life is the right of every individual. This ethos is what made us embark on the journey to develop innovative solutions for purifying the water that we drink, vegetables and fruits that we eat, homes we live in and the air that we breathe.

Use of innovative technology and support from a competent service network has enabled us to create a brand, which has become synonymous to well-being and health. Continuing with the tradition, we now present the KENT Wet Grinder, a new age, high-speed wet grinder that works like magic.

KENT Wet Grinder is not your ordinary kitchen appliance. It's designed to save time so that you are done with your kitchen chores in a matter of minutes. Unlike bulky grinders and unwieldy food processors that most of us only pull out of storage for specific recipes and special occasions, KENT Wet Grinder is so handy, so versatile and easy to use that you'll put it to work every single day.

FEATURES OF KENT WET GRINDER

1. 960 RPM for high speed operation.
2. Encased rotating drum for safe operations.
3. 150 W high power motor for effortless grinding, kneading & scrapping.
4. No noise due to encasing.
5. Suitable for making dosa and idli batter, scraping coconut and kneading atta.
6. Timer setting for easy operations.

KNOW YOUR PRODUCT



ITEMS IN THE BOX

- | | | |
|-------------------------------|---|-----|
| 1. KENT Wet Grinder Main Unit | : | 1 N |
| 2. Coconut Scraper | : | 1 N |
| 3. Atta Kneader | : | 1 N |
| 4. User Manual | : | 1 N |

USING KENT WET GRINDER

1. Remove any stickers or blade covers that might prevent from operating the unit.
2. Check the unit for damages. Do not use in case of any damages.
3. Before switching on the appliance, make sure that your home main voltage corresponds to the unit's operating voltage.
4. Clean the parts of the KENT Wet Grinder before using the appliance for the first time (see 'Cleaning & Maintenance' section).
5. Make sure all parts are completely dry before you start using the appliance.

HOW TO OPERATE

GRINDING BATTER DOSA, IDLI OR VADA

1. Wash and clean the drum and roller stone assembly.
2. Place the roller holder assembly inside the drum. Ensure compliance with the diagram printed on arm.
3. Take a cup of water and pour it into the drum.
4. Add the grinding medium in small quantities with sufficient water and close the drum with hatch.
5. Remove the hatch, rotate the knob anti-clockwise to release spring load and to unlock the roller holder. Lift the roller holder upwards.
6. Remove the drum and use batter as per need. Store the rest in the refrigerator.
7. Place the drum on coupler and gently rotate till it's seated properly.
8. Keep the knob in unlock position and close the lid.
9. Preset the timer to 30 minutes or required time by using knob.
10. Once the set grinding time is over, a beep alert will be heard and grinder will automatically switch off.
11. Remove the roller stone assembly, and wipe down/remove the batter immediately.
12. Remove the batter, once grinding is complete.

KNEADING ATTA

1. Remove the roller stones and place the atta kneader in the drum.
2. Lock the arm and feed approx. 350 gm of atta through the opening provided.
3. Pour little water and switch on the appliance.
4. Add little oil and salt to taste.
5. Add water drop by drop till you get the required consistency.



SCRAPPING COCONUT

1. Remove roller stones and place the coconut scraper in the drum.
2. Ensure that the bowl and the coconut scraper are clean and dry.
3. Take one half of the coconut, hold it firmly on the scraper and switch on the motor.
4. Now you will get fine pieces of coconuts.
5. Move the coconut suitably against the coconut scraper for complete scrapping.
6. After scrapping is over, clean the coconut scraper thoroughly and remove the same.



CLEANING & MAINTENANCE

1. Switch off and unplug the appliance before cleaning it.
2. Remove the lid and clean the drum with a solution of lukewarm water & soap. Use a cleaning brush; never use scouring pads to clean it.
3. Wipe the main unit with a moist cloth and non-abrasive liquid cleaner.
4. Do not immerse the appliance in water or any other liquid.
5. Never put any part of the appliance in the dishwasher.
6. After cleaning it thoroughly, dry it using a soft cloth.
7. Ensure that the appliance is completely dry before storing it.

Note: Never immerse the motor unit of the grinder in water, nor rinse it under the tap. Wipe it with a dry cloth.

PRECAUTIONS

1. Do not disassemble, repair or alter the machine on your own. It may cause appliance failure or breakdown.
2. The input voltage must not exceed the rating; it might damage the appliance.
3. Unplug before cleaning/moving the appliance.
4. Do not use the appliance with damaged power cord or plug.
5. If power cord is damaged, replace it with a genuine KENT spare.

6. Do not install the machine near any heat source, e.g., heater.
7. If the appliance is not in use for a longer time, unplug it.
8. Do not sit on, stand on or shake the appliance.
9. Do not use the appliance when it is in a recumbent or inclined position.

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should always be followed, including the following:

1. Unplug, when not in use and before servicing.
2. To reduce the risk of electric shock, do not use near or on wet surfaces.
3. Use the appliance only as described in the manual.
4. Do not use the appliance if cord or plug is damaged or worn out. Replace the damaged cord or plug immediately.
5. Do not try to service the appliance on your own. Send it to an authorized service centre only.
6. Keep cord away from heated surfaces.
7. Do not unplug the appliance by pulling the cord. Always unplug by pulling the plug and not the cord.
8. To avoid electric shocks, do not use the appliance with wet hands.
9. Keep hair, loose clothing, fingers and all parts of body away from moving parts.
10. Turn all controls off before unplugging.
11. This appliance is suitable for indoor use only.
12. Keep away from children.
13. The appliance is not designed to be used by people who are physically or mentally disabled or mentally handicapped or lack relevant experience and knowledge, unless a person responsible for their safety uses the product for supervision or guidance.

TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	POSSIBLE SOLUTION
The appliance does not start.	There is connection problem.	Check if the appliance is connected to the mains and if the plug is inserted firmly into the wall socket.
	The appliance is defective.	Switch off the appliance and unplug it. Go to the nearest KENT authorized service centre for assistance.
The appliance suddenly stops working while running.	The appliance has overheated.	Let the appliance cool for 20 minutes before attempting to restart it.
	The appliance is overloaded.	Remove some ingredients, add some water and try again. Switch off the appliance and unplug it. Go to the nearest KENT authorised service centre for assistance.
The appliance makes lots of noise.	The Knob is not tightened properly.	Reposition the jar in the correct position.
	Roller is not placed properly.	Switch off the appliance and unplug it. Go to the nearest KENT authorised service centre for assistance.
Motor does not work properly.	The appliance is defective.	Switch off the appliance and unplug it. Go to the nearest KENT authorised service centre for assistance.

TECHNICAL SPECIFICATIONS

Product	KENT Wet Grinder
Product Code	116079
Product Generic Name	Wet Grinder
Net Weight	11.90 kg
Dimensions (mm)	440 (L) x 265 (W) x 295 (H)
Input Power Supply	Single Phase 220-240 V, AC 50 Hz.
Total Power Consumption	150 W
Speed	960 RPM