









Imported & Marketed by: KENT RO SYSTEMS LTD.

E-6, 7 & 8, Sector-59, Noida, U.P.-201 309, India. E-mail: sales@kent.co.in | Website: www.kent.co.in

For customer complaints, contact our Customer Care Officer at: E-6, 7 & 8, Sector-59, Noida, U.P.-201 309, India. Call: 92-789-12345 E-mail: service@kent.co.in or visit us at www.kent.co.in

Made in People's Republic of China











Dear Customer,

At the outset, allow us to thank you for your trust in KENT Zoom Plus Vacuum Cleaner. At KENT, we take pride in our reputation for product quality and industry proven performance. We are certain that your decision to own a KENT Zoom Plus Vacuum Cleaner will go a long way towards keeping you and your family in good health. We are confident that you will be more than satisfied with its performance and that it will serve your need for safer and cleaner living without any compromise.

This manual would help you in getting the best out of your KENT Zoom Plus Vacuum Cleaner. Please go through the booklet to familiarize yourself with operation and maintenance.

You can look forward to years of trouble-free service. In case you require any further information, please contact your nearest KENT dealer / branch.

Happy Cleaning!

KENT RO Systems Ltd.



Table of Contents

1.	Introduction	1
2.	Features of KENT Zoom Plus Vacuum Cleaner	1
3.	Know your Product	1
4.	Items in the Box.	 2
5.	Assembling Your KENT Zoom Plus Vacuum Cleaner	 2
6.	Attaching/Detaching	 2
7.	Using the KENT Zoom Plus Vacuum Cleaner.	3
8.	Using the Accessories	3
9.	Cleaning and Maintenance	 3
10.	Important Instructions	 5
11.	General Safety Instructions	 5
12.	Caution	5
13.	Troubleshooting	 7
14.	Warning	 7
15	Technical Specifications	ρ

Introduction

We at KENT have always believed that a clean and healthy life is a right of every individual. This ethos made us embark on the journey to develop innovative solutions for cleaning water we drink, fruits & vegetable we eat, and the air we breathe. Using innovative technology and supported by a proficient service network, we have been able to create a brand which has become synonymous for well-being and health.


Continuing with the tradition, we now present the KENT Zoom Plus Vacuum Cleaner, with futuristic and state-of-the-art Cyclonic technology and HEPA filters to provide clean, dust-free, and spotless surroundings.

In KENT Zoom Plus Vacuum Cleaner, the air and dust are sucked at high-speed, creating a fast-spinning vortex while the dust is separated in a detachable cylindrical collection vessel or bin. The HEPA filter in KENT Zoom Plus Vacuum Cleaner reduces the air pollution in the room with lower dust discharge.

Features of KENT Zoom Plus Vacuum Cleaner

- Advanced Cyclonic Technology (without filtration bags) for dust collection and HEPA [High Efficiency Particulate Arrestance) based discharge filter.
- 2. Vacuum cleans floor, curtains, carpets, etc.
- 3. More hygienic cleaning than sweeping.
- 4. It works for 30 minutes after being fully charged.
- 5. Convenient & fast operation.
- 6. Bag-less design.
- 7. Washable HEPA filter.
- 8. Reduces air pollution.
- 9. Multifunctional vacuum cleaner.
- 10. Lightweight ABS body & easy to handle.

Know Your Product

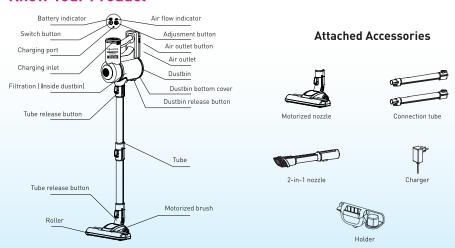

Items in the Box

1.	KENT Zoom Plus Vacuum Cleaner	: 1N
2.	Extension Tube	: 2N
3.	2-in-1 Crevice Tool	: 1N
4.	Motorized Floor/Carpet Brush	: 1N
5.	Multi Nozzle	: 1N
6.	Power Adapter	: 1N
7.	Wall Mounting Accessories	: 1N
8.	User Manual	: 1N

Assembling Your KENT Zoom Plus Vacuum Cleaner

- 1. Unpack the unit and remove any stickers that can prevent unit operation.
- 2. Check the unit for damages. Do not use it in case of any damages.
- 3. Before switching the unit on, make sure that your home's main voltage corresponds to the unit's operating voltage.

Attaching/Detaching

Connecting extension tube

- 1. Hold the tube and push it inside the other tube slowly as shown in the picture (A).
- You will hear a "Click' sound indicating that the tube is properly inserted.
- 3. To detach, gently press the button and pull out slowly.

Connecting the motorized floor/carpet brush and main unit

- Insert the upper end of the motorized floor/carpet brush to the main unit (motor). You will hear a 'Click' sound indicating that the motorized floor/carpet brush is properly inserted.
- 2. Attach the other end to the brush as shown in the picture (B).
- 3. To detach, gently press the button and pull out slowly.

 
Connecting the 2-in-1 crevice tool

- 1. Insert the crevice tool into the main unit [motor].
- 2. To detach, gently press the button and pull out slowly.

Connecting the multi nozzle tool to the main body

- 1. Insert the multi nozzle tool into the main unit (motor).
- 2. To detach, gently press the button and pull out slowly.

Note: Always remove the plug from the power socket before fitting or removing accessories.

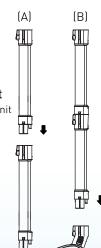

Using your KENT Zoom Plus Vacuum Cleaner

- 1. First attach the required accessory with the main unit
- 2. Power Button & Max Mode
 - Click once: power on
 - Click again: power off
 - Press the adjustment button to adjust the speed
- 3. Power Light

This Light will go on when the unit is running

- 4. Battery Indicator Lights
 - Battery is recharging (running lights)
 - Recharging complete (all lights go off)
- 5. 2-in-1 Crevice Tool

(Pull-out the brush & push-in to use the crevice tool)

6. Multi Nozzle Tool

(Pull-out the brush & push-in to use the multi nozzle tool)

Using the Accessories

- The crevice tool is ideal for cleaning surfaces that are difficult to clean otherwise, such as radiators, couch corners and cushion edges.
- 2. The motorized carp/ floors brush can be used for cleaning both, hard floors and carpets.
- 3. The multi nozzle tool is ideal for cleaning hard surfaces like floor and carpets.
- 4. Use the appliance in required mode to clean the surfaces of furniture, floors, walls and curtains, etc.

Note: Always remove the plug from the power socket before fitting or removing accessories.

Cleaning and Maintenance

Switch off and unplug the appliance before cleaning it.

Note: Never use gasoline, solvent, abrasive cleaning agents, metal objects or hard brushes to clean the appliance.

Emptying Dust Container

It is necessary to empty the dust container when it is 2/3 filled.

- · When it becomes full
- · When suction is weaker than normal
- 1. "One-click" drop off:

Push the release button to open the dust bin cap, and dump the contents without touching.

Note: Please turn off the vacuum when emptying the dust container or cleaning the filters.

Washing and Cleaning of Filters

- 1. Clean the filters:
 - Twist both filters to remove them from the dust cup
 - The HEPA filter is washable
 - To wash the outer filter place it under running water. Dry completely before use

2. DO NOT rinse the dust cup:

- DO NOT rinse the dust cup under running water. It will cause permanent damage to the motor
- Use a dry cloth to wipe clean the inside of the dust cup

Clean up the motorized brush



- 1. Turn off the power and release the motorized brush.
- 2. Turn the button on the bottom of nozzle by coin to unlock " $\binom{C}{[\mathfrak{D}]}$ " position.
- 3. Open the roller fixing cover.
- 4. Lift up one side of the roller and take it out.
- 5. Along the groove on the roller, cut off twirled hair or blockage by scissors or knife.
- 6. Place back the cleaned roller.
- 7. Cover the fixing cover and turn the button back to lock " ${}^{\bigcirc}_{\mathbb{Q}}$ " position.

Unblock

- This product has protection function. When the roller brush is stuck by the winding, the
 power will get cut off automatically from the motorized brush. Please turn off the product
 and unblock the roller immediately. (Please refer to the 'Clean up' instructions of the
 motorized brush)
- When the machine duct is blocked, the protection device will cut off all power. Check and clean the motorized brush, connection tube or host air duct. Remove the blockage and let it cool down for a period of time and then it can be used again.





Important Instructions

Please avoid below actions (to prevent leakage, overheat, fire, electric shock, and etc)

- This product contains Li-ion batteries which are intended for use in this product only. Please do not use them in other products
- Please only use the power adaptor included in the package
- Please do not throw this product into fire
- Please do not attempt to disassemble, repair, or modify this product
- Please do not recharge, use, or store this product near fire or in a high temperature environment

General Safety Instructions

When using KENT ZOOM Plus Vacuum Cleanner, basic precaution should always be followed, including the following:

- Dragging the floor head in horizontal direction
- Continue using the floor head when it's wheels or other connected parts are damaged
- Pulling or stretching the power cable
- Please avoid direct sunshine, or store near heat or fire
- Please store this product in a clean, dry area
- Please turn off the vacuum and take off the floor brush before cleaning it
- Please do not use the open end of the extension tube to vacuum directly on any surface.
- Please do not block the air outlet to avoid overheating.
- Please do not keep the unit running if the air passage is blocked
- Please do not play with the power plug

Note: Auto-protection

The following situation will trigger the auto-protection mechanism, and turn off the power automatically to prevent motor from overheating

- When the dust cup is full
- When the air passage is blocked
- When the beater bar is tangled with hair, fabric, or other material

Caution

- Never vacuum up burning matches, glowing ashes or cigarette butts.
- Do not use the vacuum cleaner for vacuuming up chemical products, stone dust, gypsum, cement or similar particles.

- Do not use the vacuum for vacuuming up water or other liquids.
- This appliance is not suitable for use with inflammable and explosive substances or chemicals and aggressive liquids.
- Please do not use when either the power adaptor, or the power cable are damaged. Misuse under such conditions may cause overheating, or fire hazard.
- Please do not touch the roller brush or the roller motor when the unit is switched on. Otherwise, fingers may get caught into the roller brush, or get hurt by the heated motor.
- Keep hair, loose clothing, fingers and all parts of body away from moving parts
- Please avoid...
- Putting this product under running water (except for the parts/ filters that are washable.)
- 2. Touching the plug/power cable with wet hands.
- 3. Using this product on wet surface
- 4. Damaging the power cable or the plug.

NOTE: This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety

- Do not allow children to play with the device or the packaging due to a danger of suffocation.
- Never leave the appliance unattended while in use
- Keep the appliance out of reach of children.

Please read carefully before using the power adaptor

- The power adaptor is for indoor use only.
- The power adaptor is for use with models specified by this manual, and is not intended for any other appliances.
- Please make sure to push the plug all the way into the power socket.
- Always use the appliance from a power outlet of the voltage marked on the appliance
- Do not use your appliance with an extension cord unless this cord has been checked and tested by a qualified technician or service person.
- Please unplug the power adaptor before cleaning or maintaining the product or if you are not planning to use this product for a while.
- In case of malfunction, please switch off the unit immediately and pull out the power adaptor from the socket.

Troubleshooting

There are some simple problems in the process of use that can be resolved by reference to the following methods

Problem	Possible Cause	Solutions
Unable to start the product	Running out of power	Refer to 'battery charging' instructions, and charge the battery
Weak or no suction by	Dustbin is full of dust Filter is not correctly assembled or HEPA is blocked by dust Nozzle and/or tubes are blocked	 Empty the dust Assemble the filter again or clean/replace filter Refer to 'unblock' instructions, and unblock the nozzle and/or tube
Nozzle roller, not rotating	Roller is blocked and protection function is activated	Refer to 'unblock' instructions, and unblock the nozzle
Lesser usage time	Battery not fully charged Battery aging	Refer to 'Battery charging' instructions, and charge the battery

Warning: For solving other problems or replacement, please always resort to professionals specified, any unauthorised repairing are not covered by warranty

Warning

- 1. Read this instruction manual carefully
- 2. This appliance is for domestic use only. Use as described in this instruction manual
- 3. It is class II electric appliance, so it need not to be earthed
- 4. Keep the vacuum cleaner away from direct irradiation sunshine and the place with high temperature. Heat can deform and discolor the plastic parts of the unit
- 5. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarity qualified person in order to avoid a hazard
- 6. Never use methylated spirits or other solvents to clean the appliance
- 7. Never leave the appliance unattended when it is switched on. Keep the appliance out of the reach of children or the infirm
- 8. Do not switch the appliance on if it appears to be faulty in any way
- 9. Do not remove the plug from the socket by pulling the cable or the appliance itself
- 10. This appliance can be used by children 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision
- 11. Keep the appliance and its cord out of reach of children less than 8 years old

Technical Specifications

Product	KENT Zoom Plus Vacuum Cleaner
Product Code	116132
Product Generic Name	Vacuum Cleaner
Net Weight	2.3 kg
Input Power Supply	Single Phase 100-240 V, AC 50-60 Hz.
Max. Vacuum Pressure	≥ 10 kPa
Noise	<80 dB
Speed Control	3
Maximum Power	150 W
Battery	Lithium, 2200 mAh
Charging Time	4-5 hrs.
Working Time	30 mins.
Dust Capacity	0.6 L

KENT	
Cyclonic	
Vacuum Cleaners	
HOUSE of PURITY	

Warranty Card

Product: KENT Zoom Plus Vacuum Cleaner

Product Code: 116132

	Serial No.: Dealer Stamp:
(CUSTOMER DETAILS:
	Customer's Name:
	Customer's Address:
	Customer Phone No.:

WARRANTY DETAILS:

Invoice Date:	Invoice No.:



Imported and Marketed by:

KENT RO SYSTEMS LTD.

E-6, 7 & 8, Sector-59, Noida-201 309, U.P., India. E-mail: service@kent.co.in | Website: www.kent.co.in Customer Care: 92-789-12345

Terms & Conditions of Warranty

KENT warrants all new products manufactured by it to be free from defects in material and workmanship under normal usage and service from the date of purchase as under:

- 1. The Warranty period commences from the date of purchase by the first end-user. During this Warranty period of one year, KENT or its Authorized Service Provider 10. This Warranty Agreement excludes all (ASP) will replace or repair any part of KENT Vacuum Cleaner, that in the opinion of KENT or its ASP, would be defective in operation due to faulty material or workmanship (i.e. manufacturing defects) with the exception of consumables such as Filters.
- 2. The product's plastic body is not covered under Warranty and hence, it must be handled with care to guard against breakage.
- 3. The original purchaser of the unit can avail services under Warranty at the point of sale, by producing the damaged part(s) along with the original invoice.
- 4. This Warranty is void if the unit is not 11. KENT reserves the right to alter or operated under normal conditions or according to the instructions given in the manual.
- 5. Product returned to KENT or its ASP for Warranty examination must be shipped freight prepaid.
- 6. KENT or its ASP shall not be held liable for claims exceeding the cost of repair of the defects in workmanship.
- 7. This Warranty Agreement shall not be interpreted to render KENT or its ASP liable for injuries or damages of any kind direct, consequential or contingent to persons or property.
- 8. KENT or its ASP shall not be held responsible by representative or buyer for failure to abide by any of the obligations of this Warranty Agreement if such failures are the result of circumstances of Forces Majeures: such as, but not limited to, floods, earthquakes, transportation strikes, labour disputes with outside suppliers or any other conditions beyond the control of KENT or its ASP.
- 9. KENT or its ASP shall not be held liable for repair or alterations made without

- prior written approval; for products failures resulting from the lack of proper maintenance.
- products/component parts or damage to any part of this Vacuum Cleaner which, in the opinion of KENT or its ASP, have been subjected to misuse; misapplication; negligence; alteration; accident or operation contrary to our instructions, incompatibility with accessories not installed by KENT or its ASP, or that have been repaired with component parts other than those manufactured by or obtained from KENT or its ASP. Damage caused by freezing, flood, fire or Act of God is not covered by this Warranty. In all such cases regular charges will apply. This limited Warranty does not include service to diagnose a claimed malfunction in this unit.
- improve design and specifications at any time, without any contingent obligations to prospective buyers or owners of the products previously sold.
- 12. Any disagreements and obligations based upon the purchase of KENT products and thereby imposed on KENT or its ASP shall be governed by and construed according to the laws of INDIA and subject to the jurisdiction of Delhi Courts only.
- 13. KENT or its ASP assumes no Warranty liability in connection with this Vacuum Cleaner other than that specified herein. This Warranty is in lieu of all other warranties, expressed or implied, including warranties of fitness for a particular purpose, KENT or its ASP does not authorize any person or representative to assume for them any other obligations on the sale of this Vacuum Cleaner.
- 14. Under no circumstances, the liability of KENT or its ASP shall exceed the value of the product.
- 15. Under no circumstances are the terms mentioned above negotiable and no employee of KENT or its ASP has the authority to supersede them.