



TOUCHLESS SANITISER DISPENSER

INSTRUCTION MANUAL



Innovations for
Better Living

Marketed by:

KENT RO SYSTEMS LTD.

E-6, 7 & 8, Sector-59, Noida, U.P.-201 309, India.

E-mail: sales@kent.co.in | Website: www.kent.co.in

Manufactured by:

KENT RO SYSTEMS LTD.

A-6, Sector-87, Noida-201 305, U.P., India.

E-mail: sales@kent.co.in

For customer complaints, contact Customer Care Officer at:

E-6, 7 & 8, Sector-59, Noida, UP-201 309, India. Call: 92-789-12345

E-mail: service@kent.co.in or visit us at www.kent.co.in



Sanitiser
Capacity
350ml

Welcome
to **KENT**

Dear Customer,

At the outset, allow us to thank you for your trust in **KENT**. We take pride in our reputation for product quality and industry proven performance. We are certain that your decision to own a **KENT Touchless Sanitiser Dispenser** will go a long way towards keeping you and your employees in good hygiene and health. We are confident that you will be satisfied with its performance and that it will serve your need for safer premises without any compromise on hygiene and cleanliness.

This guide will help you in getting the best out of your **KENT Touchless Sanitiser Dispenser**. Please go through this booklet to familiarize yourself with its operation and maintenance.

Best Wishes,

KENT RO SYSTEMS LTD.

TABLE OF CONTENTS

1. KENT Touchless Sanitiser Dispenser	1
2. Features	1
3. Know Your Product	1
4. Items in the Box	1
5. Installation Instructions	2
6. Operations & Indicator Lights	2
7. Cleaning & Maintenance	3
8. Important Safety Instructions	3
9. Technical Specifications	4


KENT TOUCHLESS SANITISER DISPENSER

KENT proudly presents KENT Touchless Sanitiser Dispenser, which will go a long way towards keeping you and your family in good hygiene and health. We are confident that you will be satisfied with its performance and that it will serve your need for better hygiene and cleanliness.

FEATURES

- Transparent container for sanitiser
- High storage capacity of 350 ml
- Removable sanitiser container for cleaning and easy refilling
- Fully automatic and touchless use for hands-free operation
- Can be wall-mounted or kept on table top

KNOW YOUR PRODUCT

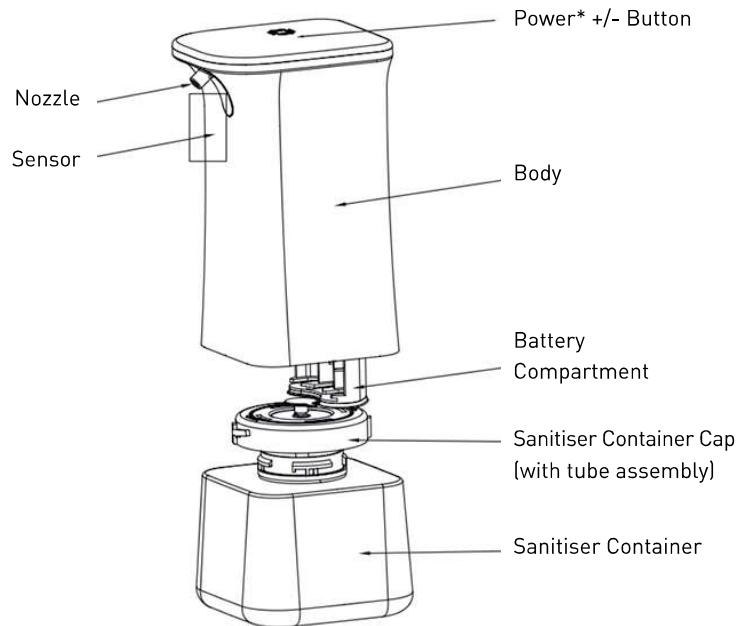


ITEMS IN THE BOX

- | | |
|---------------------------------------|---------|
| 1. KENT Touchless Sanitiser Dispenser | : 1 N |
| 2. Hooks for Wall Mounting | : 1 Set |
| 3. User Manual | : 1 N |


INSTALLATION INSTRUCTIONS

Installation Procedure

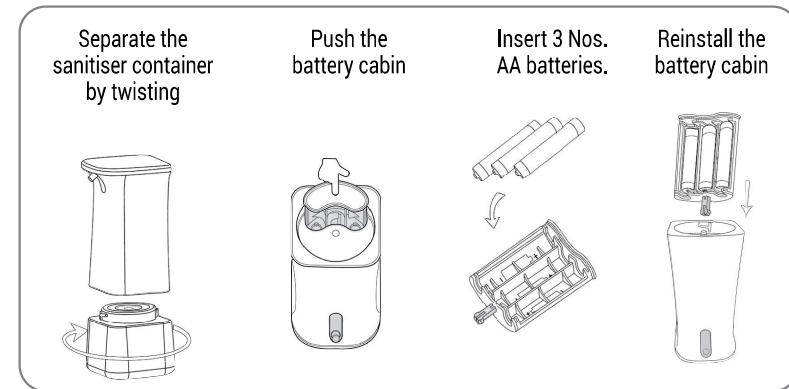

Note: Recommend to use LR6 alkaline batteries (AA1.5V)

Fill/Refill Sanitiser

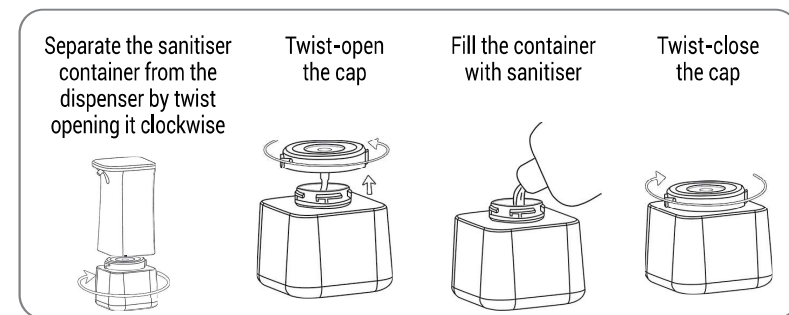

OPERATIONS & INDICATOR LIGHTS

There are 2 operation modes-low output mode & high output mode. The output volume can be adjusted by pressing the power button.

Operation

- To use in low output mode, press the power button once
- To use in high output mode, press the power button twice
- To switch off, press the power button thrice.

Indicator Lights

- Blue indicator light flashes once: the unit works in low output mode
- White indicator light flashes one: the unit works in high output mode
- Red indicator light flashes once: the unit is switched off
- Red indicator light blinks constantly: low battery alert

CLEANING & MAINTENANCE

- After starting to use the machine, if it is left unused for many days, the evaporation of water in the pipeline will cause the sanitiser to coagulate, which will have a certain impact on the pump. It is advised to store the sanitiser bottle separately from the machine
- If the machine has not been maintained for more than 3 months, then the pump may not function properly in such case remove the bottle, open the cap, and pour warm water below 40°C into the bottle. (warm water at about 40°C has a better chance of dissolving the sticky stuff in pipes). Put the liquid bottle back on the machine and start using it as usual until water comes out of the outlet. Repeat 10-15 times for better results.



Remove the bottle



Open the cap, and pour warm water below 40°C into the bottle



Put the liquid bottle back on the machine and start using it as usual until water comes out of the outlet. Repeat 10-15 times for better results

IMPORTANT SAFETY INSTRUCTIONS

- Do not place the product on places that are subject to vibration or shock, such as on a wobbling table or an unstable tilted place
- Do not bump, apply excessive force, or scratch. It may cause damage
- Do not wipe the main unit with thinner or benzene. It may cause deformation or discoloration
- Do not install the product in a place close to fluorescent lamps expose it to strong light. It may cause malfunctioning
- Make sure that the sensor unit is not exposed to liquid. The sensor may stop responding. In case you choose not to use the unit for an extended period of time, empty the container of sanitiser
- In case of no use, clean the dispenser and remove the batteries. Store it in a dry place.
- Sanitiser is strongly advised as it works best with sanitiser dispenser

Battery Safety

- Do not mix the old batteries with the new ones
- Do not use rechargeable batteries as it may affect the proper functioning of the unit
- Please remove the batteries if the unit is not being used for a long time
- Batteries are small objects and must be replaced by an adult
- Use appropriate batteries, 3Nos. AA 1.5V Batteries

TECHNICAL SPECIFICATIONS

Product	: KENT Touchless Sanitiser Dispenser
Product Code	: 112013
Product Generic Name	: Sanitiser Dispenser
Product Colour	: Pink
Mounting	: Counter Top & Wall Mountable
Input Power Supply	: 4.5 V, 3Nos. AA 1.5V Batteries (Not Included)
Capacity	: 350 ml
Dispensing Qty.	: Adjustable amount
Sensor Type	: Infrared Sensor
Net Weight	: 260 g
Product Dimensions (mm)	: 83 (L) X 79 (W) X 208 (H)
Total Power Consumption	: 1.5 W